


## SCANDIA HEATER- Installation Diagram for Separate Control

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

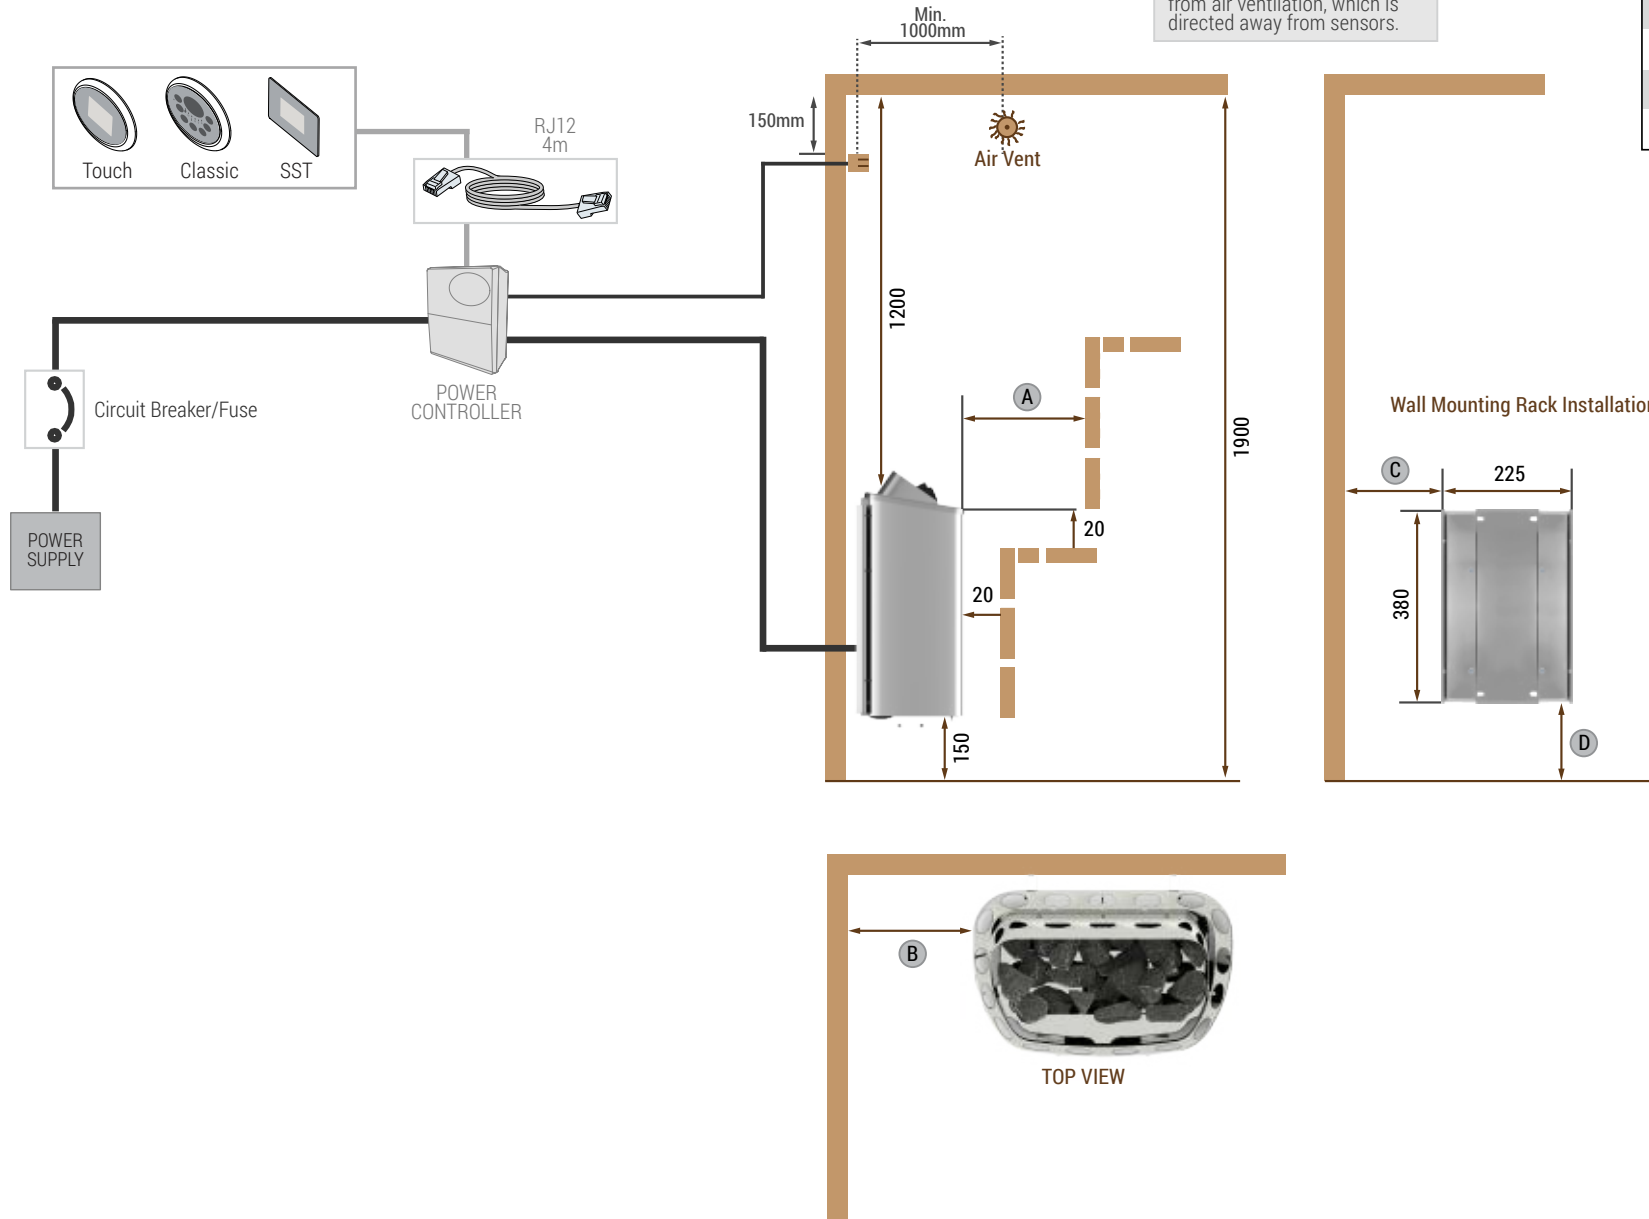


### Minimum Safety Distances

	A	B	C	D
SCA-45NS	60	50	135	155
SCA-60NS	60	50	135	155
SCA-80NS	60	50	135	235
SCA-90NS	60	50	135	235

## SCANDIA HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C	D
SCA-45NB	100	100	185	155
SCA-60NB	100	100	185	155
SCA-80NB	100	100	185	235
SCA-90NB	100	100	185	235

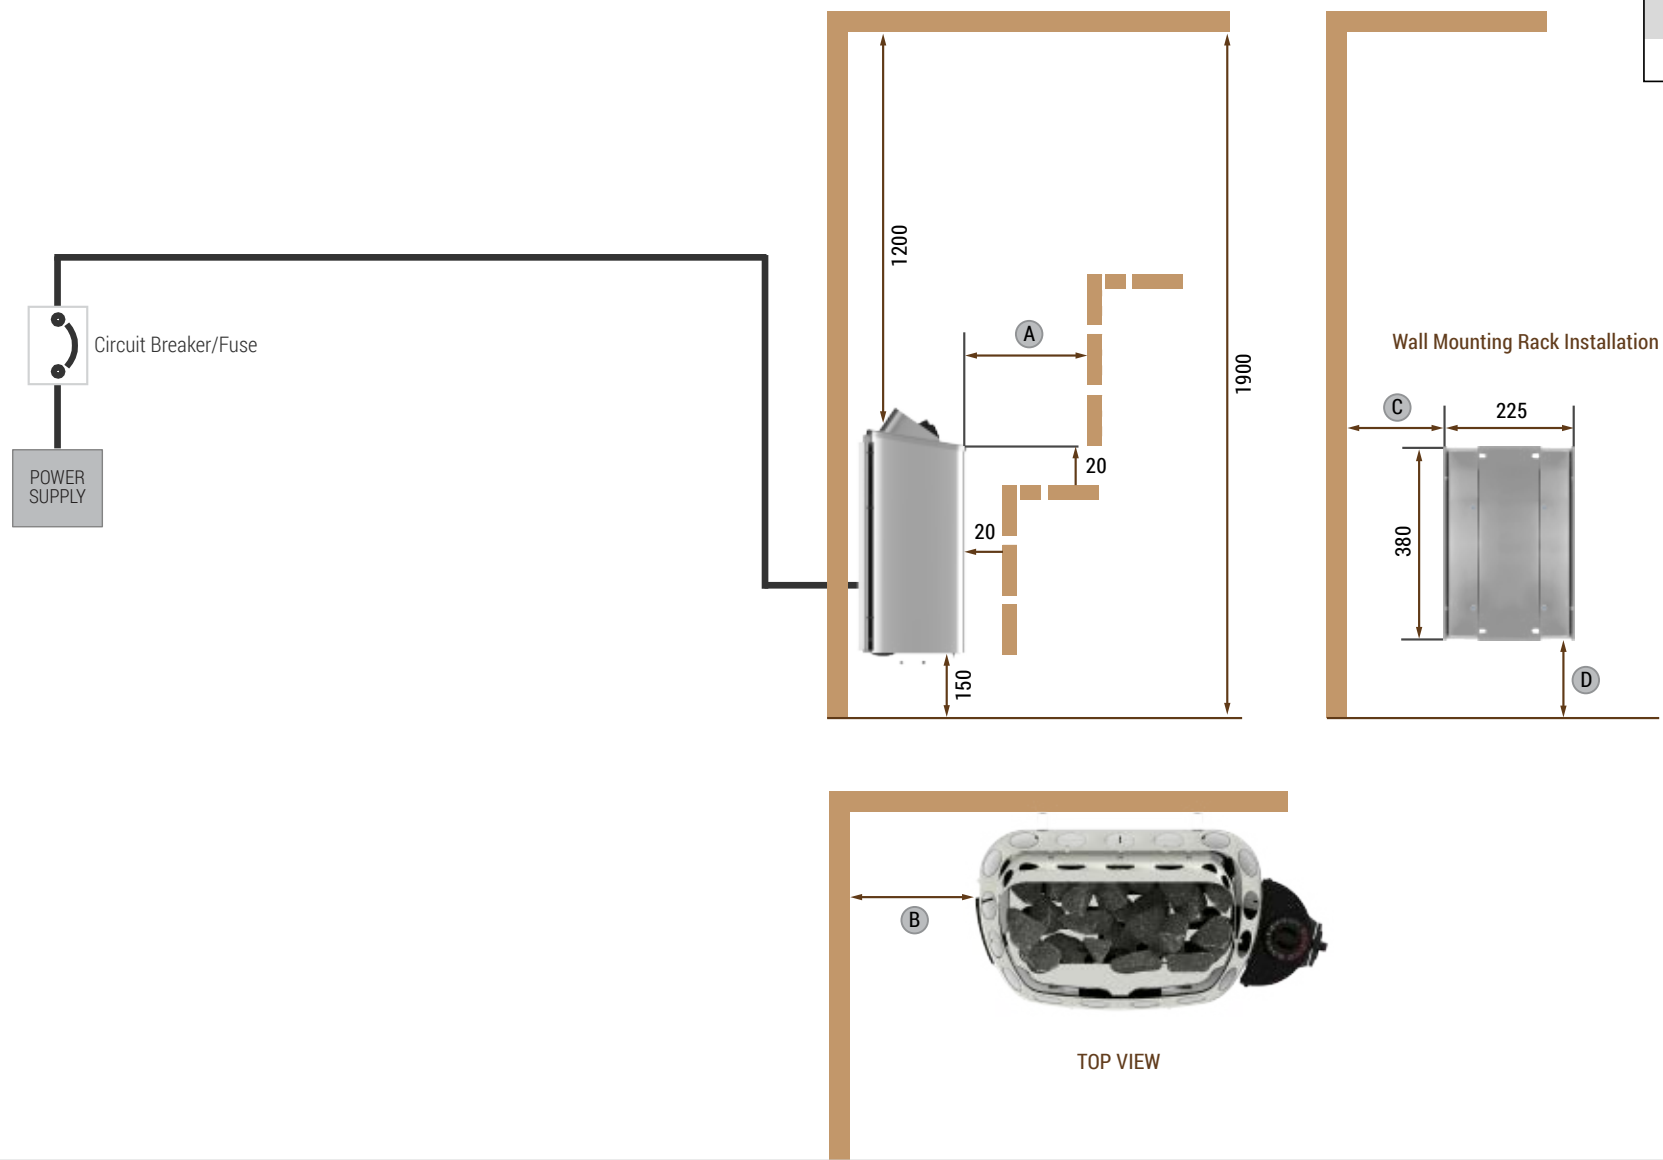

TOP VIEW